



# Hinge Adjustments

**CLIP Top series**  
107°, 120°, & Thick door hinges


## Side Adjustment

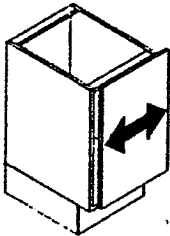


Turn front screw clockwise to increase door overlay, counter-clockwise to decrease.  
Range =  $\frac{5}{32}$ " (4mm)

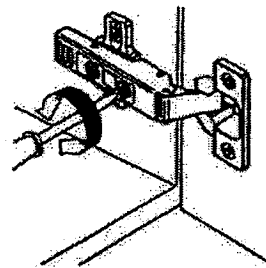


## Depth Adjustment

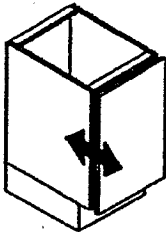


Rotate back screw to adjust door position.  
Range =  $\frac{3}{16}$ " (5mm)

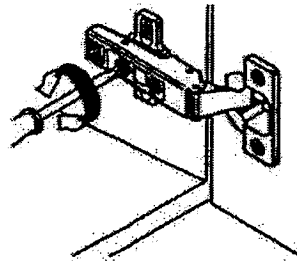


## Height Adjustment

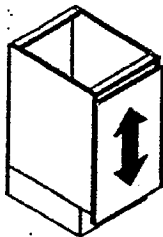

Loosen screw(s) on the mounting plate. Adjust door to position and tighten screws.  
Range =  $\frac{5}{32}$ " (4mm)

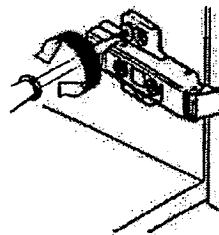


Two-piece mounting plate

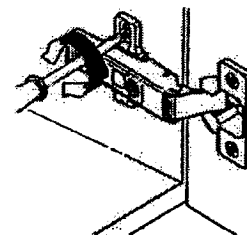

One-piece mounting plate

## Door Removal and Installation

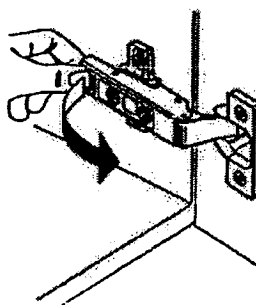

Release the lever under the hinge arm to remove.

To reinstall, place the hinge on the mounting plate and push the back with finger pressure. The "CLIP" sound confirms a secure attachment.

